


Lift Plus - Sit to Stand Desk


Classic and Ergonomic Top

USER MANUAL




Ergonomic Top Components

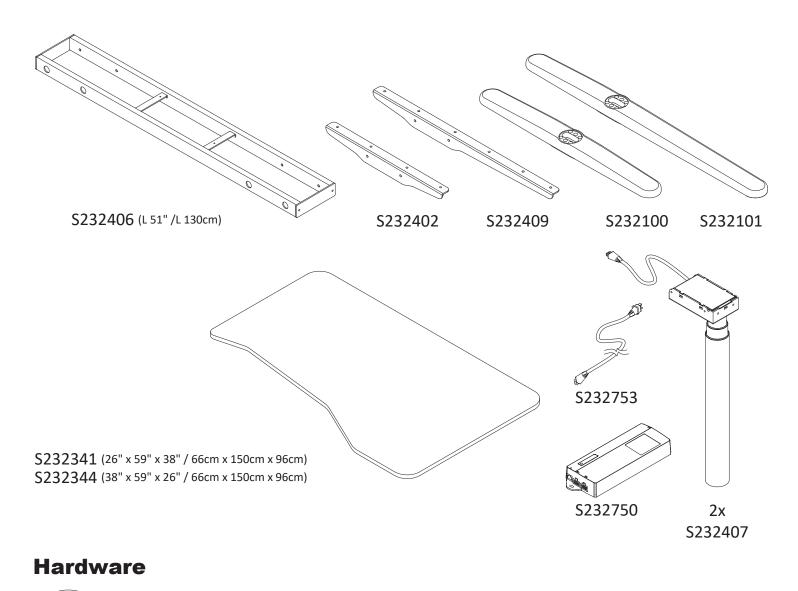

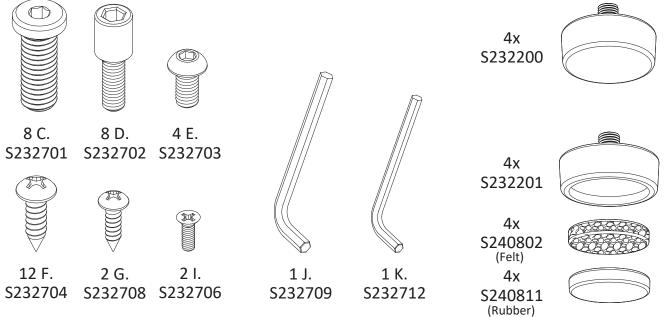



Classic Top Components

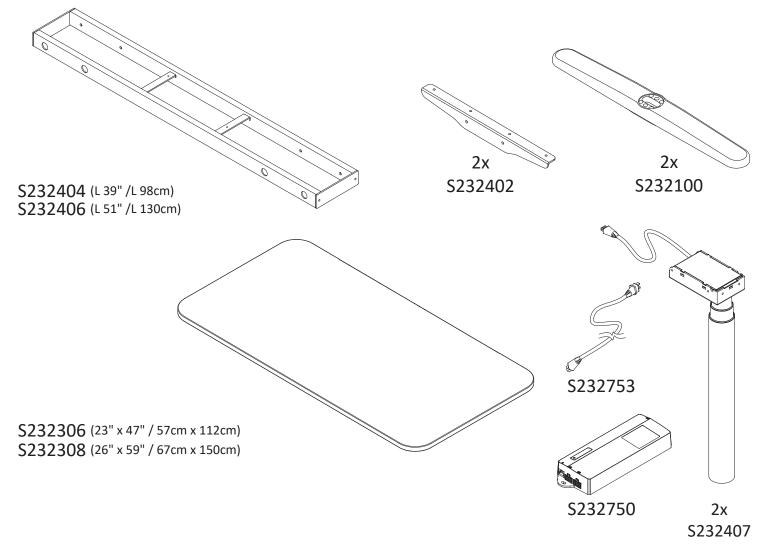

Hardware





HOMEOffice

Height Control Options

Memory Height Control

Standard Height Control

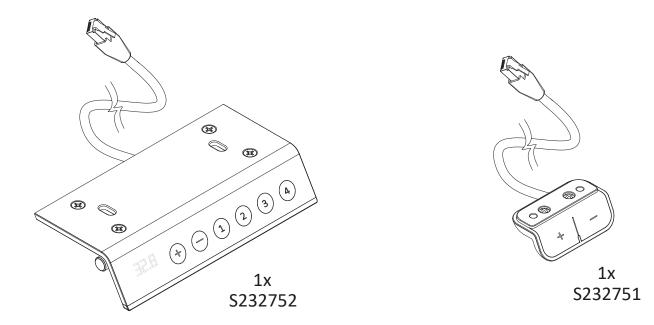


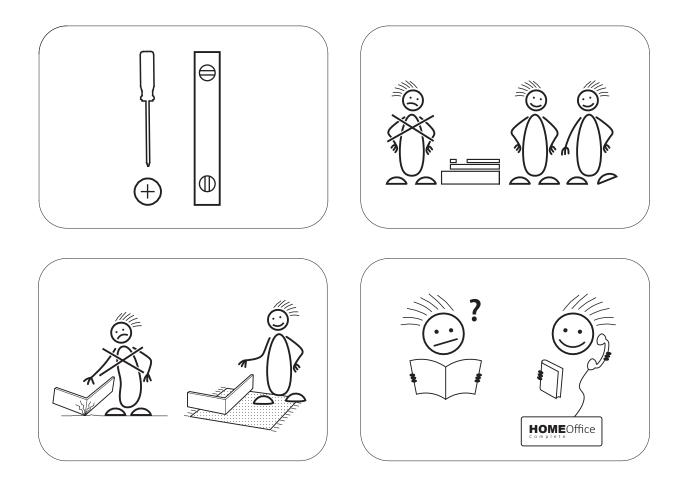





STEP 1.


Build desk with top facing down

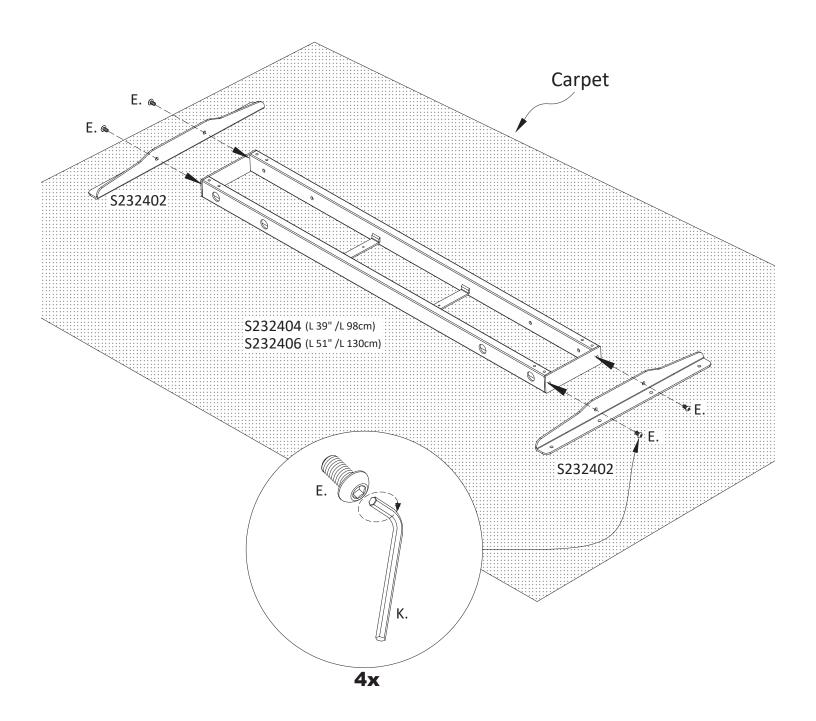


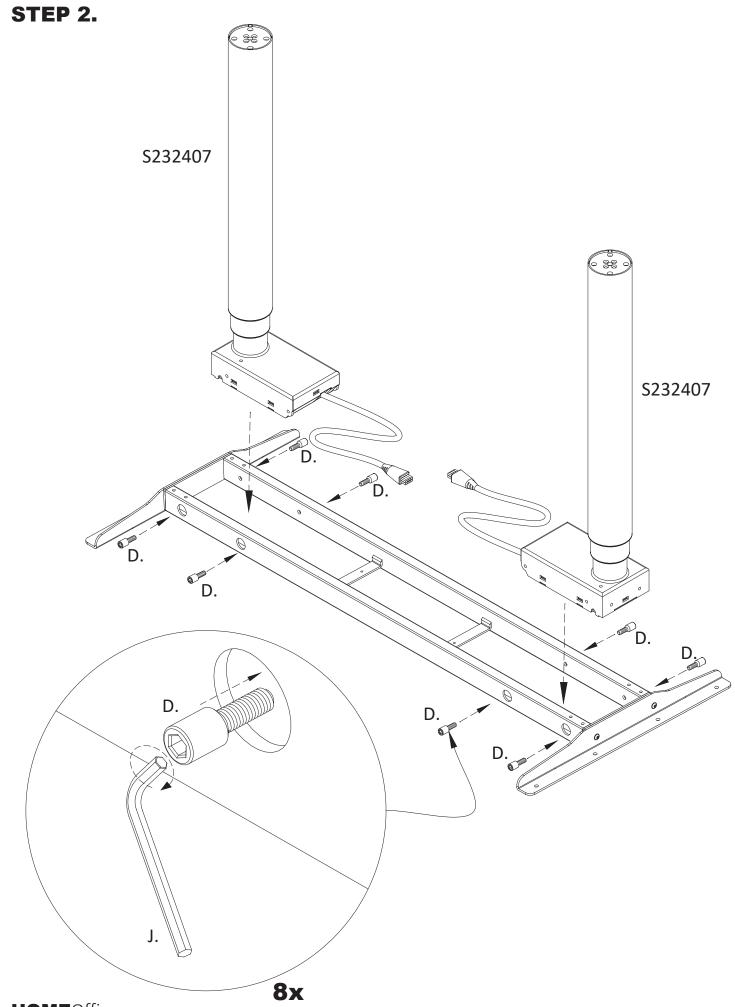

HOMEOffice

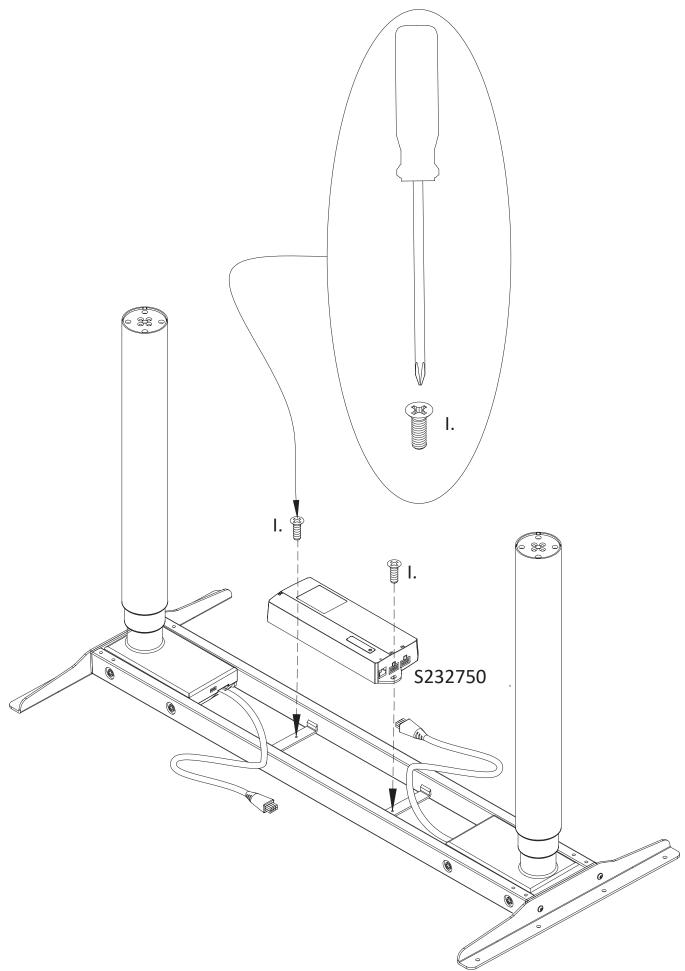

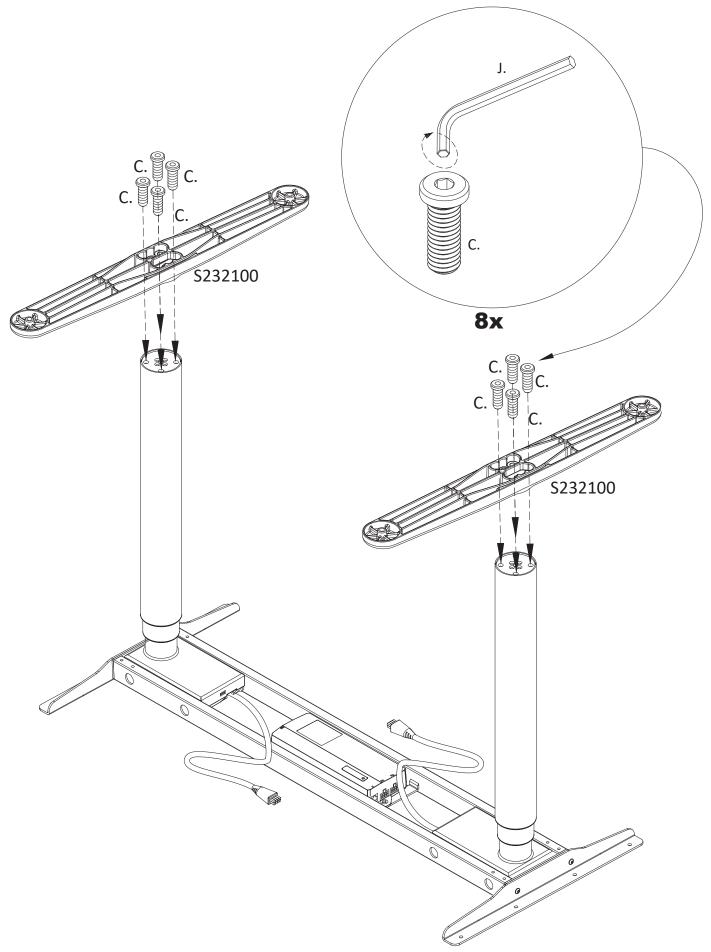


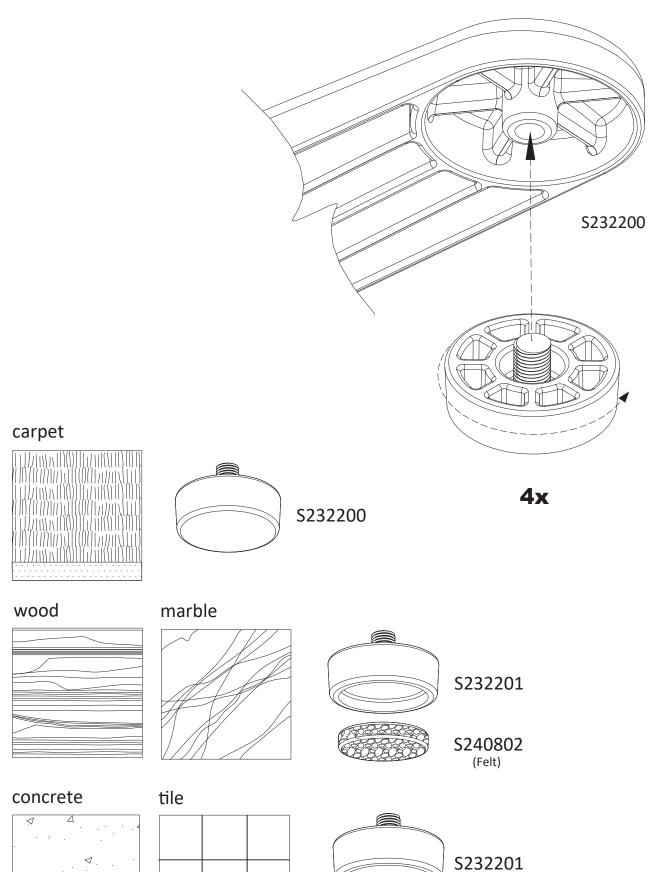

S240811


(Rubber)

 \triangleleft

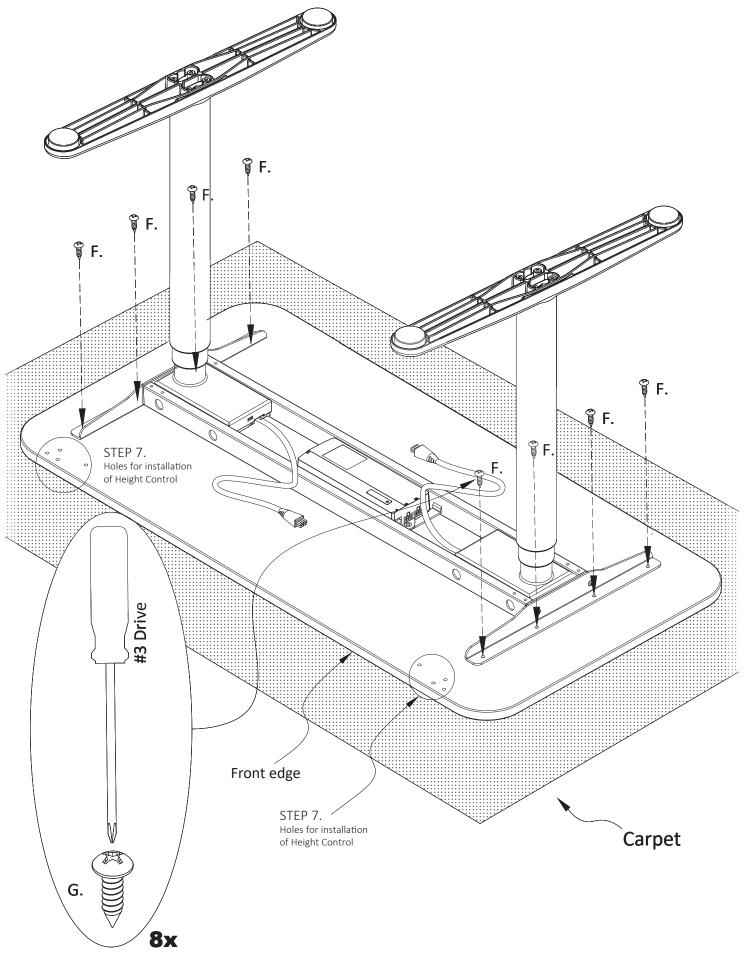

STEP 7.

Standard Height Control

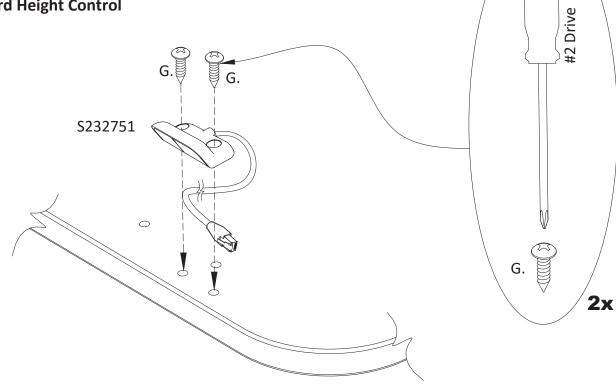


Memory Height Control G. G. #2 Drive S232752 $\overline{0}$ Р G. \bigcirc **2**x

For Operation instructions see pg.15

i

STEP 8.


Plug in all components

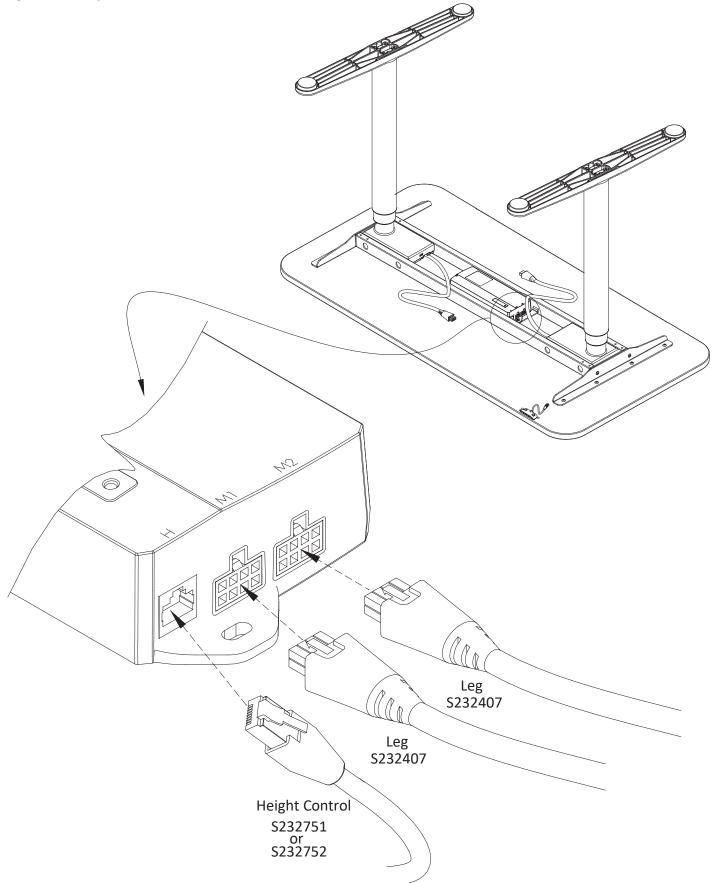



STEP 9.

Plug in Power Cable to Control Box

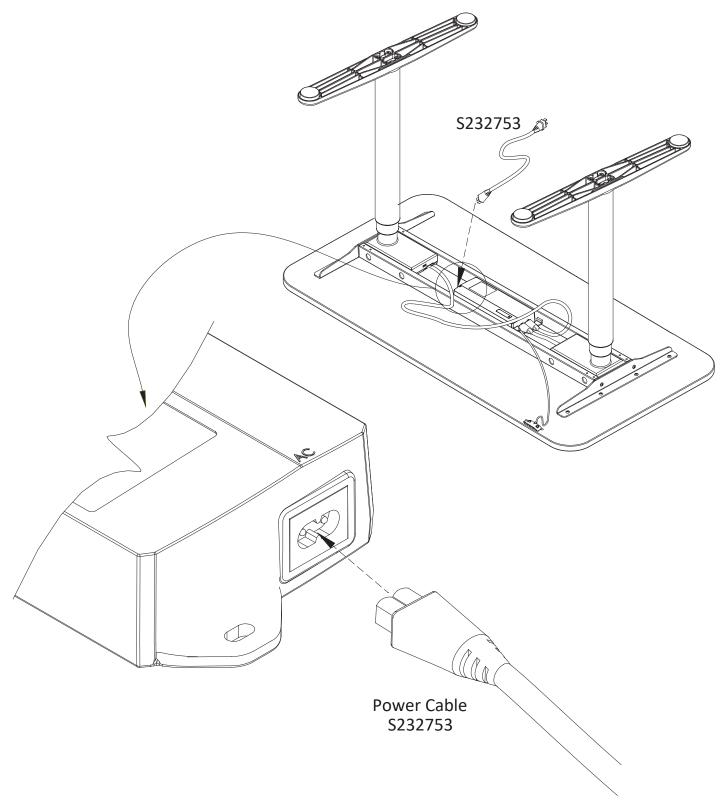

DO NOT plug the power cable into a wall power outlet until the desk is flipped over and resting on its legs.




STEP 10.

-Flip desk

-Plug in power cable to wall outlet.

-Adjust height using switch (see pg.15 for more details).


-Level using glides.

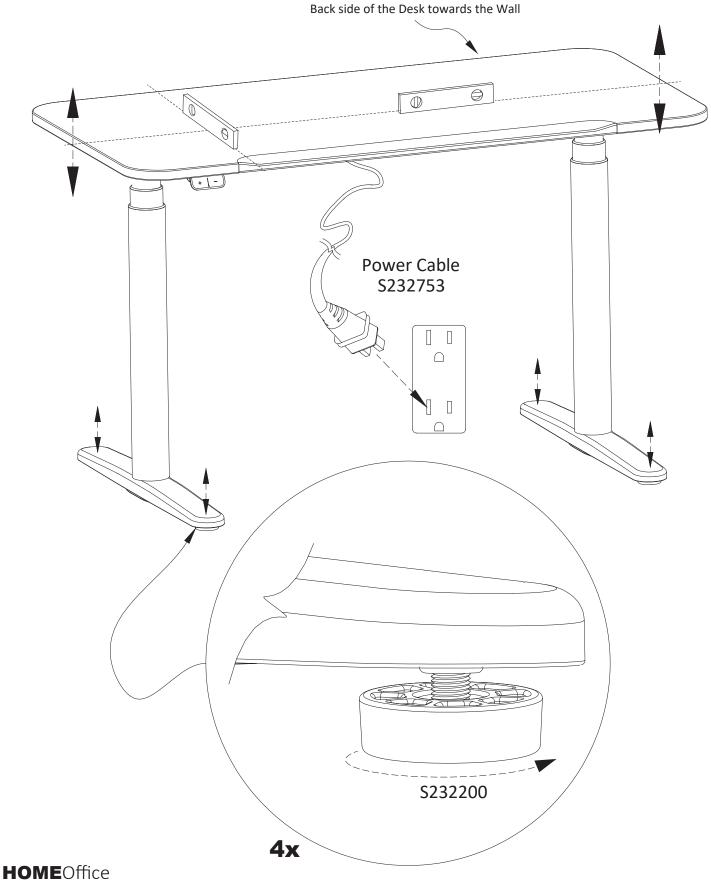

Standard Height Control


Adjusting the Height

Press + or - button until the desk reaches the preferred height.



Memory Height Control


1. Reset - Users must conduct a reset when operating the desk for the first time. Simultaneously press **+** and **-** for 3 seconds. Continue pressing the buttons until both columns are in the lowest position. When finished with the reset, the control box will make a "beep" sound and the buttons can be released. When finished with the reset, the display will show the starting height.



Hold until Control box makes "beep" sound

2. Adjusting the Height


Press + or - button until the desk reaches the preferred height.



Up and down buttons

3-digit height display

Memory setting buttons



3. Presetting the Desk Starting Height

- (1) Press + button until the desk reaches its lowest position and then release button. Re-press button
- (2) Adjust the starting height number with the + or button.
- (3) After 10 seconds, the display will stop flashing and this will confirm that you have successfully set the starting height.

4. Setting the Memorized Position - Unit 01 supports a maximum of 4 memory positions.

To memorize a position adjust the desk to the desired height

Press preferred memory button (1, 2, 3, 4), with either + or - for 2 seconds, once the display shows P1 or P2 or P3 or P4, the position is memorized.



After successful setup press button 1, 2, 3 or 4 to move the desk to the memorized position.

Hold for 2 seconds until display shows P1

5. Switching Metric and Imperial

(1) Press memory buttons 1, 2 and 4 for 5 seconds.

(2) The digital display will show "C-I". If no further instruction is input within 5 seconds, the system reverts to normal operation *How to choose a metric unit:*

Press button 2, the digital display will show "C" to stand for centimeter.

- How to choose a *imperial* unit:
 - Press button 3, the digital display will show "I" to stand for inch.

6. Feature for special conditions- setting the Upper and Lower Height Limit

Setting the upper height limit:

- (1) Adjust the desk to the preferred upper height limit.
- (2) Press + and buttons together for less than 3 seconds, holding + and release button.
- Note: Some control boxes may not support setting the upper and lower height limit functionality.
- (3) Re-press for more than 3 times at a slow pace.
- (4) A beeping sound will notify you that the process has been completed.
- Disable the upper height limit:
 - (1) Move the desk to the upper height limit being set.
- (2) Repeat instructions #2~4 above to disable the upper limit setting.
- Setting the lower height limit:
 - (1) Adjust the desk to the preferred lower height limit.
 - (2) Press + and buttons together for less than 3 seconds, holding + and release button.
 - Note: More than 3 seconds will direct to "Reset" mode.
 - (3) Re-press for more than 3 times at a slow pace.
 - (4) A beeping sound will notify you that the process has been completed.

Disable the lower height limit:


- (1) Move the desk to the lower height limit being set.
- (2) Repeat instructions #2~4 above to disable the upper limit setting.




 (\mathbf{i}) DO NOT stand on or sit on the top of the desk.

MAX: 250lbs UU U 00




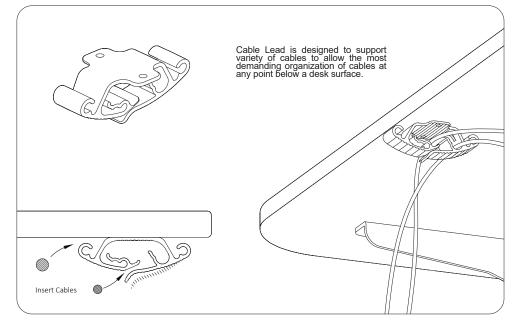

For Wire management organization please see our HOMEOffice Wire management products

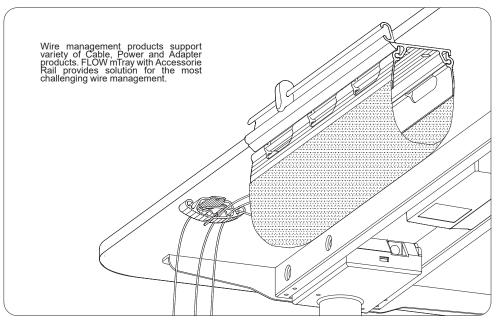

For enhanced comfort while working please see our HOMEOffice Accessories products (Support Pillow)

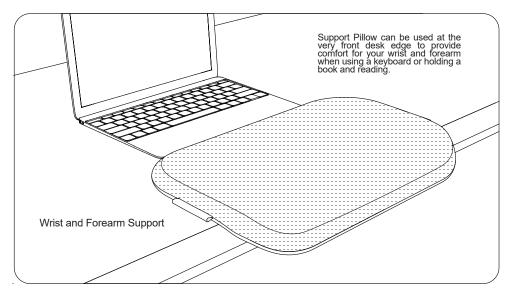



+

+







Lift Plus Sit to Stand Desk

Visit our website for purchasing additional products, maintenance, warranty information, and to find the latest news from HOME Office Complete: www.homeofficecomplete.com